

Anchoring Barefoot®

with Velcro


— Velcro Strips 1" x 4"

— Spaced 6" from edge and about 10" apart.


-3'-



Directions: Hook to Floor. Loop to mat. Loop requires an application of super glue to Velcro before securing it to the underside rubber seam. Surfaces must be clean and free from oil, especially the floor, before applying the Velcro strips. Be sure to peel away plastic film. Factory can attach Velcro to the mats at time of order for an additional charge. Questions: 213-229-0830.

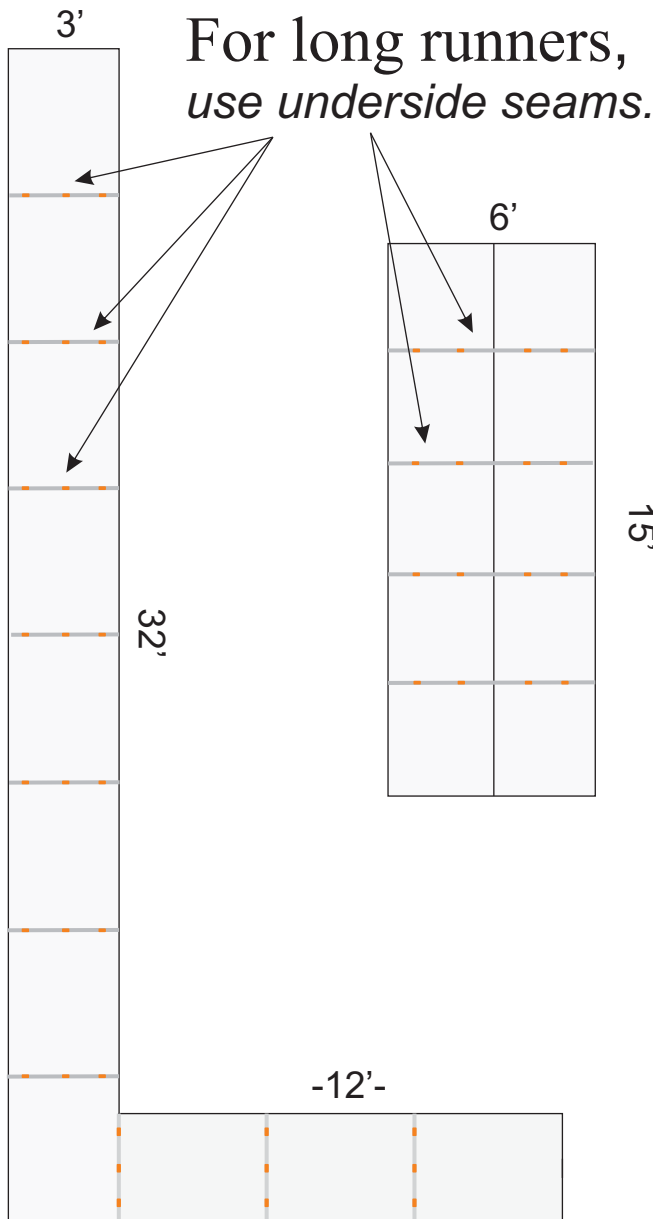

For small sections, use outer tabs along one side.

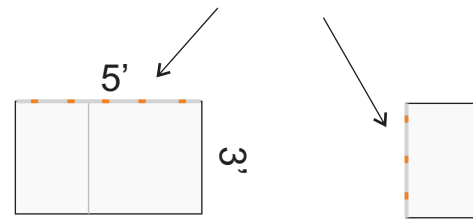

Notes:

Clean floor, Clean mat.
 Velcro: Hook on floor, Loop on mat.
 Apply super glue in a thin "S" pattern after removing film.
 Apply pressure after application.

Long runs: Lay out entire mat. Weigh-down one end. Roll-up other end toward the weights. (Roll well, edge-to-edge). Apply Velcro at seams as you roll-out. Apply appropriate pressure. Repeat process at other end.

Small mats: Apply Velcro at bottom of interlocking tabs along the length.

